



How to enable the parameter at the back stage.


1. Press the button "maintain" to access the password page.

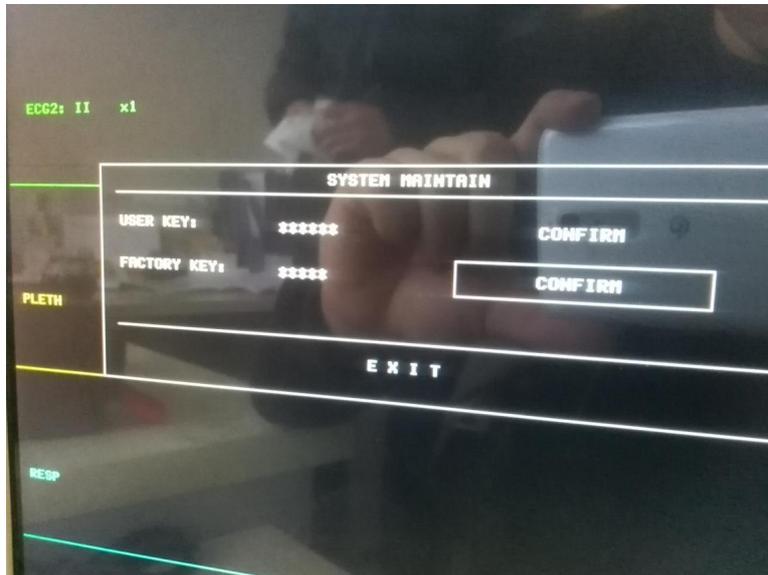

2. Move cursor to "*****" of the Factory key and press the knob.
3. Enter 88888 and click the CONFIRM.
4. Go to the module setup.

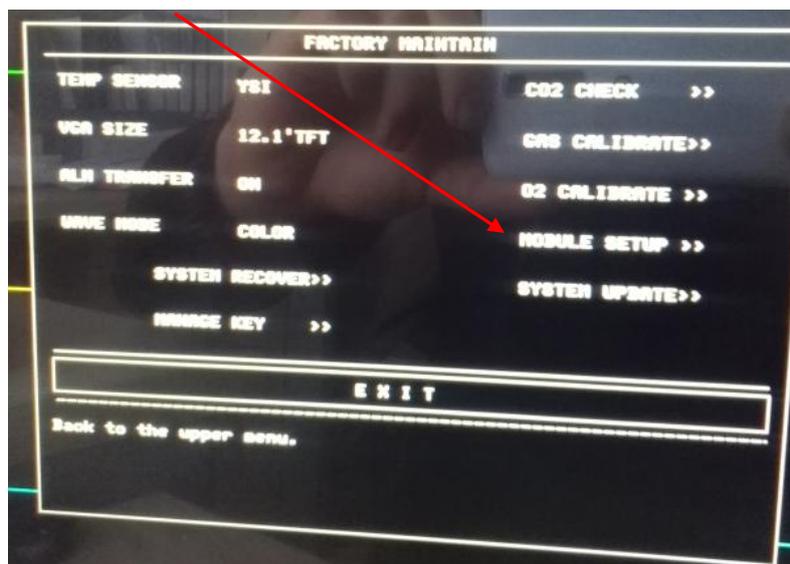

5. Enable the parameter.

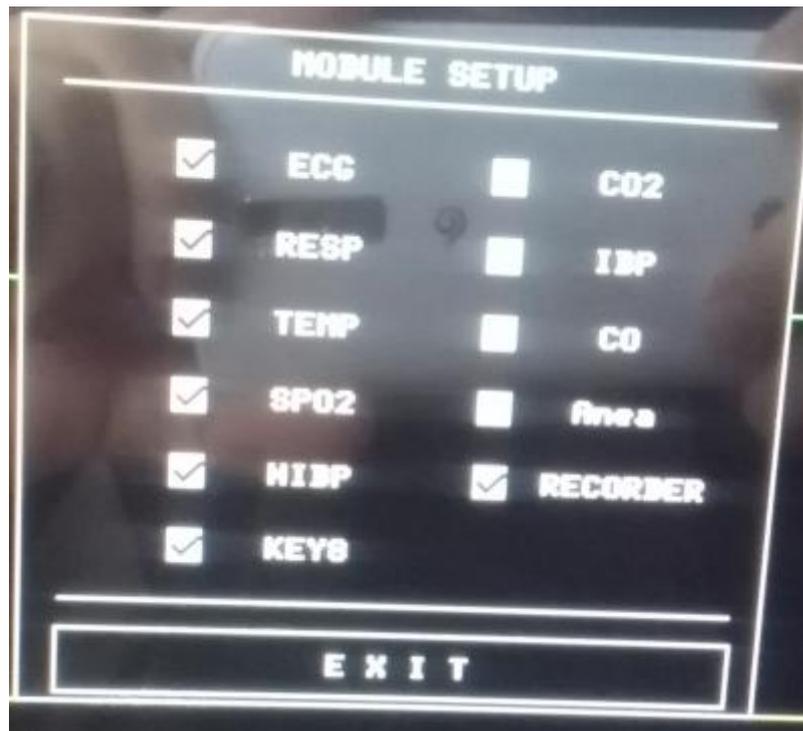

***Warning: Please do not change any other settings in the factory maintain because that may cause the system failure or unstable, and the above problem should be fixed by us.**